

DMX CHARTS

THEATRE								
Channel	1 Ch	2 Ch	4 Ch "1"	5 Ch "1"	6 Ch	10 Ch	15 Ch	17 Ch
1	DIMMER	DIMMER	DIMMER	DIMMER	DIMMER	DIMMER	DIMMER	DIMMER
2		DIMMER SPEED	CTO	CTO	CTO	RED	DIMMER FINE	DIMMER FINE
3			HUE	HUE	HUE	GREEN	RED	STROBE
4			DIMMER SPEED	STROBE	STROBE	BLUE	RED FINE	CTO
5				DIMMER SPEED	COLOR MACRO	WHITE	GREEN	HUE
6					DIMMER SPEED	CTO	GREEN FINE	CROSSFADE
7						HUE	BLUE	RED
8						STROBE	BLUE FINE	RED FINE
9						COLOR MACRO	WHITE	GREEN
10						DIMMER SPEED	WHITE FINE	GREEN FINE
11							CTO	BLUE
12							HUE	BLUE FINE
13							STROBE	WHITE
14							COLOR MACRO	WHITE FINE
15							DIMMER SPEED	COLOR MACRO
16								CTO ON COLORS
17								DIMMER SPEED

THEATRE

1 Ch	2 Ch	4 Ch "1"	5 Ch	6 Ch "1"	10 Ch "1"	15 Ch "1"	17 Ch	FUNCTION	DMX Value	Default
1	1	1	1	1	1	1	1	DIMMER 0÷100%	000 ÷ 255	000
						2	2	DIMMER FINE 0÷100%	000 ÷ 255	000
							3	STROBE No Function (shutter open) Strobe effect slow to fast No Function (shutter open) Random strobe effect slow to fast No Function (shutter open)	000 ÷ 030 031 ÷ 100 101 ÷ 130 131 ÷ 200 201 ÷ 255	255
							5	HUE 25 to 0 0 0 to +25	000 ÷ 126 127 ÷ 127 128 ÷ 255	127
					2	3	7	RED 0÷100%	000 ÷ 255	000
						4	8	RED FINE 0÷100%	000 ÷ 255	000
					3	5	9	GREEN 0÷100%	000 ÷ 255	000
						6	10	GREEN FINE 0÷100%	000 ÷ 255	000
					4	7	11	BLUE 0÷100%	000 ÷ 255	000
						8	12	BLUE FINE 0÷100%	000 ÷ 255	000
					5	9	13	WHITE 0÷100%	000 ÷ 255	000
						10	14	WHITE FINE 0÷100%	000 ÷ 255	000
		2	2	2			4	CTO 2800K - 3200K 3200K - 3500K 3500K - 4000K 4000K - 4500K 4500K - 5000K 5000K - 5600K 5600K - 6000K 6000K - 6500K	000 ÷ 031 032 ÷ 063 064 ÷ 095 096 ÷ 127 128 ÷ 159 160 ÷ 191 192 ÷ 223 224 ÷ 255	000
					6	11		CTO 2800K-3200K 3200K-3500K 3500K-4000K 4000K-4500K 4500K-5000K 5000K-5600K 5600K-6000K 6000K-6500K Color Mix	000 ÷ 030 031 ÷ 060 061 ÷ 090 091 ÷ 120 121 ÷ 150 151 ÷ 180 181 ÷ 210 211 ÷ 240 241 ÷ 255	000
		3	3	3	7	12		HUE 0 -25°÷25°	000 ÷ 000 001 ÷ 255	000
							6	CROSSFADE 0÷100%	000 ÷ 255	000
			4	4	8	13	3	STROBE No Function Strobe Slow to Fast	000 ÷ 010 011 ÷ 255	000

				5	9	14	15	COLOR MACRO No Function Amber Shift on Color Macro	000 ÷ 002 003 ÷ 005 006 ÷ 255	000
							16	CTO ON COLORS 0÷100%	000 ÷ 255	000
	2	4	5	6	10	15	17	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 ÷ 051 052 ÷ 101 102 ÷ 152 153 ÷ 203 204 ÷ 255	000

TOUR

Channel	4 Ch "2"	6 Ch "2"	10 Ch "2"	15 Ch "2"
1	RED	DIMMER	DIMMER	DIMMER
2	GREEN	RED	RED	DIMMER FINE
3	BLUE	GREEN	GREEN	RED
4	WHITE	BLUE	BLUE	RED FINE
5		WHITE	WHITE	GREEN
6		STROBE	STROBE	GREEN FINE
7			COLOR TEMPERATURE	BLUE
8			AUTO PROGRAM	BLUE FINE
9			AUTO SPEED	WHITE
10			DIMMER SPEED	WHITE FINE
11				STROBE
12				COLOR TEMPERATURE
13				AUTO PROGRAM
14				AUTO SPEED
15				DIMMER SPEED

TOUR

4 Ch "2"	6 Ch "2"	10 Ch "2"	15 ChB"2"	FUNCTION	DMX Value	Default
	1	1	1	DIMMER 0÷100%	000 ÷ 255	000
			2	DIMMER FINE 0÷100%	000 ÷ 255	000
1	2	2	3	RED 0÷100%	000 ÷ 255	255
			4	RED FINE 0÷100%	000 ÷ 255	255
2	3	3	5	GREEN 0÷100%	000 ÷ 255	255
			6	GREEN FINE 0÷100%	000 ÷ 255	255
3	4	4	7	BLUE 0÷100%	000 ÷ 255	255
			8	BLUE FINE 0÷100%	000 ÷ 255	255
4	5	5	9	WHITE 0÷100%	000 ÷ 255	255
			10	WHITE FINE 0÷100%	000 ÷ 255	000
	6	6	11	STROBE No Function Strobe Slow to Fast	000 ÷ 010 011 ÷ 255	255
		7	12	COLOR TEMPERATURE Color Mix 2800K 3200K 3500K 4000K 4500K 5000K 5600K 6000K 6500K Color Mix	000 ÷ 005 006 ÷ 030 031 ÷ 055 056 ÷ 080 081 ÷ 105 106 ÷ 130 131 ÷ 155 156 ÷ 180 181 ÷ 205 206 ÷ 230 231 ÷ 255	000
		8	13	AUTO PROGRAMS No Function Auto Program 1 Auto Program 2 Auto Program 3 Auto Program 4 Auto Program 5 (Auto Program1-4)	000 ÷ 010 011 ÷ 060 061 ÷ 110 111 ÷ 160 161 ÷ 210 211 ÷ 255	
		9	14	AUTO SPEED Auto speed slow to fast	000 ÷ 255	
		10	15	DIMMER SPEED MODE Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)	000 ÷ 051 052 ÷ 101 102 ÷ 152 153 ÷ 203 204 ÷ 255	