

MOSAICO

DMX CONTROL

12 CH	14 CH	16 CH	19 CH	SCENES RECORD	FUNCTION	DMX Value
1	1	1	1	1	SHUTTER Shutter closed No function (shutter open) Strobe effect slow to fast No function (shutter open) Pulse-effect in sequences No function (shutter open) Random strobe effect slow to fast No function (shutter open)	000 - 031 032 - 063 064 - 095 096 - 127 128 - 159 160 - 191 192 - 223 224 - 255
2	2	2	2	2	DIMMER Dimmer (close to open)	000 - 255
			3		DIMMER FINE Dimmer (close to open)	000 - 255
3	3	3	4	3	COLOR WHEEL 1 Indexed Open Open+DARK RED DARK RED DARK RED + LIGHT ORANGE LIGHT ORANGE LIGHT ORANGE + YELLOW YELLOW YELLOW + GREEN GREEN GREEN + UV UV UV + MAGENTA MAGENTA MAGENTA + DARK BLUE DARK BLUE DARK BLUE+Open Forward Spin Fast to slow Stop Rotation Stop Reverse Spin Slow to fast Continuous Positioning from 1 to 15	000 - 003 004 - 007 008 - 011 012 - 015 016 - 019 020 - 023 024 - 027 028 - 031 032 - 035 036 - 039 040 - 043 044 - 047 048 - 051 052 - 055 056 - 059 060 - 063 064 - 094 095 - 096 097 - 127 128 - 255
4	4	4	5	4	COLOR WHEEL 2 Indexed Open Open+CTO CTO CTO + JADE JADE JADE + CTB CTB CTB + PINK PINK	000 - 003 004 - 007 008 - 011 012 - 015 016 - 019 020 - 023 024 - 027 028 - 031 032 - 035

MOSAICO

12 CH	14 CH	16 CH	19 CH	SCENES RECORD	FUNCTION	DMX Value
4	4	4	5	4	PINK + LIGHT GREEN LIGHT GREEN LIGHT GREEN + DARK ORANGE DARK ORANGE DARK ORANGE + CYAN CYAN CYAN+Open Forward Spin Fast to slow Stop Rotation Stop Reverse Spin Slow to fast Continuous Positioning from OPEN to CYAN	036 - 039 040 - 043 044 - 047 048 - 051 052 - 055 056 - 059 060 - 063 064 - 094 095 - 096 097 - 127 128 - 255
5	5	5	6	5	ROTATING GOBO WHEEL Open Position 1 Position 2 Position 3 Position 4 Position 5 Position 6 Position 7 Position 1 Shaking slow to fast Position 2 Shaking slow to fast Position 3 Shaking slow to fast Position 4 Shaking slow to fast Position 5 Shaking slow to fast Position 6 Shaking slow to fast Position 7 Shaking slow to fast Fast to Slow(Forward Spin) Stop (Stop Rotation) Slow to Fast(Revers Spin)	000 - 005 006 - 010 011 - 015 016 - 020 021 - 025 026 - 030 031 - 035 036 - 040 041 - 055 056 - 070 071 - 085 086 - 100 101 - 115 116 - 130 131 - 145 146 - 199 200 - 201 202 - 255
6	6	6	7	6	ROTATING GOBO Positioning from 0-360 degrees (Indexing) Fast to Slow Stop Slow to Fast	000 - 191 192 - 221 222 - 225 226 - 255
			8		GOBO FINE Gobo Fine	000 - 255
7		7		7	PRISM ROT Prism Off Index Fast to Slow Stop Slow to Fast	000 - 000 001 - 127 128 - 189 190 - 193 194 - 255
	7		9		PRISM Prism Off Indexed Rotation	000 - 020 021 - 127 128 - 255

MOSAICO

12 CH	14 CH	16 CH	19 CH	SCENES RECORD	FUNCTION	DMX Value
	8		10		R PRISM Index	000 - 255
					Fast to Slow Stop Slow to Fast	000 - 127 128 129 - 255
			11		PRISM FINE	000 - 255
8	9	8	12	8	FROST 0% to 100%	000 - 255
9	10	9	13	9	FOCUS	000 - 255
			14		FOCUS FINE	000 - 255
10	11	10	15	10	ZOOM	000 - 255
			16		ZOOM FINE	000 - 255
11					ANIMATION WHEEL Open/No Function Forward stop to fastest Stop Reverse stop to fastest	000 - 003 004 - 127 128 - 131 132 - 255
	12	11	17	11	ANIMATION Effect Off Linear insertion	000 - 007 008 - 255
	13	12	18	12	ANIMATION ROTATION Positioning 0°~360° Slowest to fastest(Forward Spin) Stop Fastest to Slowest(Reverse Spin)	000 - 191 192 - 221 222 - 225 226 - 255
12	14		19		CONTROL No function Enable blackout while color change (Hold 3 Second) Disable blackout while color change (Hold 3 Second) Enable blackout while gobo change (Hold 3 Second) Disable blackout while gobo change (Hold 3 Second) Color1 Reset (Hold 3 Second) Color2 Reset (Hold 3 Second) Gobo1 Reset (Hold 3 Second) Prism Reset (Hold 3 Second) Focus Reset (Hold 3 Second) Zoom Reset (Hold 3 Second) Frost Reset (Hold 3 Second) Effect Reset (Hold 3 Second) No function Reset all (Hold 3 Second) No function	000 - 059 060 - 069 070 - 079 080 - 089 090 - 099 100 - 109 110 - 119 120 - 129 130 - 139 140 - 149 150 - 159 160 - 169 170 - 179 180 - 199 200 - 209 210 - 255

MOSAICO

12 CH	14 CH	16 CH	19 CH	SCENES RECORD	FUNCTION	DMX Value
		13			SHOW No Function Show 1 Show 2 Show 3	000 - 063 064 - 127 128 - 191 192 - 255
		14			CHASE No Function Chase 1 Chase 2 Chase 3 Chase 4 Chase 5 Chase 6 Chase 7 Chase 8	000 - 028 029 - 056 057 - 085 086 - 113 114 - 141 142 - 170 171 - 198 199 - 226 227 - 255
		15			SCENE No Function Scene 1 Scene 2 Scene 3 Scene 4 Scene 5 Scene 6 Scene 7 Scene 8 Scene 9 Scene 10 Scene 11 Scene 12 Scene 13 Scene 14 Scene 15 Scene 16 Scene 17 Scene 18 Scene 19 Scene 20 Scene 21 Scene 22 Scene 23 Scene 24 Scene 25 Scene 26 Scene 27 Scene 28 Scene 29 Scene 30 Scene 31 Scene 32	000 - 007 008 - 015 016 - 023 024 - 030 031 - 038 039 - 046 047 - 054 055 - 061 062 - 069 070 - 077 078 - 085 086 - 092 093 - 100 101 - 108 109 - 115 116 - 123 124 - 131 132 - 139 140 - 146 147 - 154 155 - 162 163 - 170 171 - 177 178 - 185 186 - 193 194 - 200 201 - 208 209 - 216 217 - 224 225 - 231 232 - 239 240 - 247 248 - 255
		16			SCENE RECORD No Function Edit Scene Mode Edit Scene Mode (Hold 3S and Save)	000 - 010 011 - 128 129 - 255