## Wireless protocol compatibility

The below table explains the compatibility between the wireless card installed on board of the unit and the transmitter.

			Transmitter						
Wireless Card		W-DMX			~	Lumen Radio			0
		G3	G4S	G5	CRMX <sup>1</sup>	G3	G4S	CRMX	CRMX2
COB W-DMX Rx board		~	~	×	×	~	~	×	×
<b>Nano</b> <b>W-DMX</b> Rx board		~	~	×	×	~	~	×	×
<b>Tiny</b> <b>W-DMX</b> Tx/Rx board <sup>2</sup>	W-DMX Multi R WHICH	~	~	~	×	~	~	×	×
<b>TiMo Fx</b> <b>CRMX</b> Tx/Rx board <sup>3</sup>	TIMO RX RDM	~	~	4	~	~	~	~	4
<b>TiMo Two Fx CRMX</b> Tx/Rx board <sup>5</sup>	Lanewation Diale Two FX Diale Two FX Diale Stress Sector	~	~	~	~	~	~		

<sup>1</sup> available only for G6 version

<sup>2</sup> used as Tx, transmit in G5

- <sup>3</sup> used as Tx, transmit in CRMX, from firmware 1.2.0.0 user can select G3, G4S, CRMX
- <sup>4</sup> only from firmware 1.1.0.0 onward on receiver board

<sup>5</sup> used as Tx, user can select G3, G4S, CRMX