

DMX CONTROL

4 CHANNELS

MODE 4 Ch	FUNCTION	DMX Value
1	RED 0~100%	000 - 255
2	GREEN 0~100%	000 - 255
3	BLUE 0~100%	000 - 255
4	WHITE 0~100%	000 - 255

6 CHANNELS

MODE 6 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast No function Random strobe effect slow to fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255

10 CHANNELS

MODE 10 Ch	FUNCTION	DMX Value
1	DIMMER 0~100%	000 - 255
2	RED 0~100%	000 - 255
3	GREEN 0~100%	000 - 255
4	BLUE 0~100%	000 - 255
5	WHITE 0~100%	000 - 255
6	STROBE No function Strobe Slow to Fast No function Random strobe effect slow to fast No function	000 - 030 031 - 100 101 - 130 131 - 200 201 - 255
7	COLOR FUNCTION No Function Color Function White presents Color macro	000 - 010 011 - 085 086 - 170 171 - 255
8	COLOR PRESENTS RGB 100%, 0~100%, 0% RGB 0~100%, 100%, 0% RGB 0%, 100%, 0~100% RGB 0%, 0~100%, 100% RGB 0~100%, 0%, 100% RGB 100%, 0%, 0% ~ 100% RGB 100%, 0% ~ 100%, 0% ~ 100% RGB 0% ~ 100%, 0% ~ 100%, 100% RGBW 100%, 100%, 100%, 100%	000 - 028 029 - 056 057 - 084 085 - 112 113 - 140 141 - 168 169 - 196 197 - 224 225 - 255
	WHITE PRESENTS RGB W 2000K RGB W 2000K ~ 3000K RGB W 3000K ~ 4000K RGB W 4000K ~ 5000K RGB W 5000K ~ 6000K RGB W 6000K ~ 7000K RGB W 7000K ~ 8000K RGB W 8000K ~ 9000K RGB W 9000K ~ 10000K	000 000 - 040 041 - 070 071 - 100 101 - 130 131 - 160 161 - 190 191 - 220 221 - 255

10 CHANNELS

MODE	FUNCTION	DMX Value
10 Ch		
8	COLOR MACRO	
	Auto Program 1	000 - 060
	Auto Program 2	061 - 110
	Auto Program 3	111 - 160
	Auto Program 4	161 - 210
	Auto Program 5 (Auto program1- 4)	211 - 255
9	COLOR MACRO SPEED	
	Color macro speed slow to fast	000 - 255
10	DIMMER FADE	
	Dimmer fade from fast to slow <i>Slow is the same of DIMMER3 (the slowest)</i>	000 - 255